





151 20 001  
30cm大皿  
D-30 H-3.3 ¥4,300



151 20 002  
27cmディナー皿  
D-27 H-2.7 ¥2,300



151 20 003  
24cmミート皿  
D-24 H-2.4 ¥1,500



151 20 005  
20cmケーキ皿  
D-20 H-2.4 ¥1,100



151 20 008  
16cmパン皿  
D-16.2 H-1.9 ¥800



151 20 010  
11cm小皿  
D-11 H-2 ¥700



151 20 026  
11.5cmボウル  
D-11.7 H-4.5 ¥1,000



151 20 027  
9cmボウル  
D-9.1 H-4 ¥800



151 20 012  
23cmスープボウル  
D-23 H-4 ¥1,600



151 20 013  
19cmクープスープボウル  
D-19 H-3.3 ¥1,300



151 20 014  
16cmフルーツボウル  
D-16 H-3 ¥950



151 20 051  
アメリカンカップ  
L-11 S-8.7 H-7.4 C-260cc ¥1,100

151 20 055  
兼用ソーサー  
D-15 H-2.2 ¥750



151 20 052  
コーヒーカップ  
L-10.5 S-8 H-6.7 C-180cc ¥950

151 20 056  
コーヒーソーサー  
D-13.6 H-2 ¥700



151 20 053  
ティーカップ  
L-11.3 S-9 H-5.9 C-200cc ¥1,000

151 20 055  
兼用ソーサー  
D-15 H-2.2 ¥750